PROVEN PERFORMANCE

Customers in over 50 countries and in diverse markets and sectors.





Motion Control Stepper System

Stepper System Catalog

- Stepper Driver
- Stepper Motor





Denomination rules / Selection table

- 02 Denomination rules/model list of stepper driver
- 03 Denomination rules/model list of stepper motor
- 04 Selection table of stepper driver&motor

Stepper Driver

- 05 Stepper driver 2CM525
- 06 Stepper driver 2CM545
- 07 Stepper driver 2CM560
- 08 Stepper driver 2CM860
- 09 Stepper driver 2CM880
- 10 Stepper driver 3CM880
- 11 Stepper driver CM880A
- 12 Stepper driver 2M412
- 13 Stepper driver 2M1180N
- 14 Stepper driver 2M2280N
- 15 Stepper driver 2H1160
- 16 Stepper driver 3M2280N
- 17 CAN bus stepper driver FM860
- 18 Power supply module PFC100-65
- 19 Power supply module PRC100
- 20 Power supply module P110-65


Stepper Motor

- 21 Two-phase stepper motor/42 series
- Two-phase stepper motor/57 series
- Two-phase stepper motor/86 series
- Two-phase stepper motor/110 series
- 27 Two-phase stepper motor/130 series
- Three-phase stepper motor/57 series
- 29 Three-phase stepper motor/85 series

Selection and Installation

- 30 Calculation for stepper motor selection
- 31 Example for stepper motor selection
- 32 Installation instructions for stepper motors
- 33 Typical wiring diagram


Denomination rules/model list of stepper driver

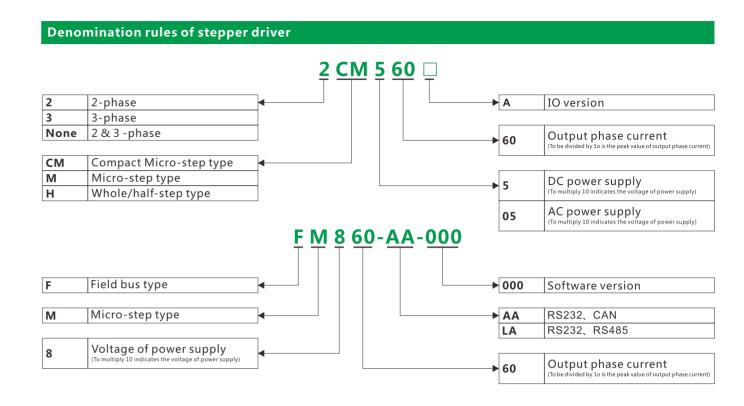


Model list of stepper driver

Series No.	Phase	Model	Peak current	Voltage	Subdivision	Weight (Kg)	Dimension (mm)	
	2-phase	2CM525	0.3 ~ 2.5A	24 ~ 50VDC	200 ~ 25600	0.25		
	2-phase	2CM545	1.0 ~ 4.5A	24 ~ 50VDC	200 ~ 25600	0.25	118×75.5×25.4	
CM Series	2-phase	2CM560	1.8 ~ 6A	24 ~ 50VDC	200 ~ 25600	0.25	110^/3.3^23.4	
	2-phase	2CM860	1.8 ~ 6A	24 ~ 70VDC	200 ~ 25600	0.25		
	2-phase	2CM880	2.4 ~ 8A	24 ~ 70VDC	200 ~ 25600	0.253	118×75.5×34	
	3-phase	3CM880	2.4 ~ 8A	24 ~ 70VDC	400 ~ 25600	0.253		
	2&3-phase	CM880A	0.15 ~ 8A	24 ~ 70VDC	200 ~ 65535	0.29	108×75.5×34	
	2-phase	2M412	0.2 ~ 1.2A	12~40VDC	400 ~ 51200	0.13	76×60×35.2	
	2-phase	2H1160	2.5 ~ 6.5A	60 ~ 123VAC	200 ~ 400	1.77	200×123×86.5	
M Series	2-phase	2M1180N	4.5 ~ 8A	77 ~ 123VAC	400 ~ 25600	1.5		
	2-pilase	2M2280N	4.5 ~ 8A	220VAC±15%	400 ~ 25600	1.5	201×147×66	
	3-phase	3M2280N	2.8~8A	220VAC±15%	400 ~ 20000	1.5		
FM Series	2&3-phase	FM860-LA-000	0.15~8A	24 ~ 70VDC	200 ~ 65535	0.36	134.5×75.5×34	
	200-pilase	FM860-AA-000	0.13 0.1	2. 70750	200 33333	0.50	134.34/3.3434	

Denomination rules/model list of stepper motor

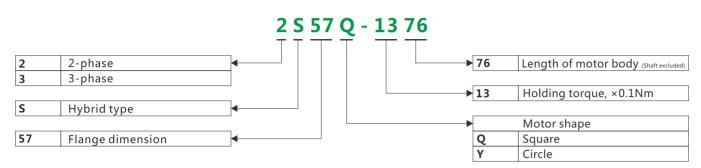

Phase	Flange	Model	Holding	Phase co	urrent (A)	Phase	Phase	Inertia	Lead	Shalf	Shalf type		Weight	
No.			torque (N.m)	Series	Parallel	resistance (Ω)	inductance (mH)	(Kg.cm²)	No.	diameter (mm)		(mm)	(Kg)	angle (°)
	42	2S42Q-0240	0.22	0	.4	12.5±10%	21±20%	0.054	4	5	Without key	40	0.28	1.8
	42	2S42Q-0348	0.34	0.7	1.4	4.6±10%	4±20%	0.068	8	5	Without key	48	0.36	1.8
	57	2S57Q-0541	0.5	0.7	1.5	3.6±10%	4.1±20%	0.135	8	6.35	Platform	41	0.45	1.8
2-		2S57Q-0956	0.9	1.96	3.92	0.8±10%	1.2±20%	0.3	8	6.35	Platform	56	0.7	1.8
<u>-</u>	5/	2S57Q-1376	1.3	1.96	3.92	1±10%	2.1±20%	0.48	8	6.35	Platform	76	1	1.8
phase		2S57Q-2280	2.2	2.8	5.6	0.8±10%	1.8±20%	0.53	8	8	Platform	80	1.1	1.8
Ф		2S57Q-25B2	2.5	2.9	6	1±10%	1.8±20%	0.8	8	8	Platform	112	1.7	1.8
	0,0	2S86Q-3465	3.4	(6	0.3±10%	1.7±20%	1	4	13	Flat key	65	1.7	1.8
	86	2S86Q-4580	4.5	(6	0.38±10%	3.5±20%	1.4	4	13	Flat key	80	2.3	1.8
		2S86Q-85B8	8.5	(6	0.6±10%	6±20%	3.4	4	13	Flat key	118	3.7	1.8

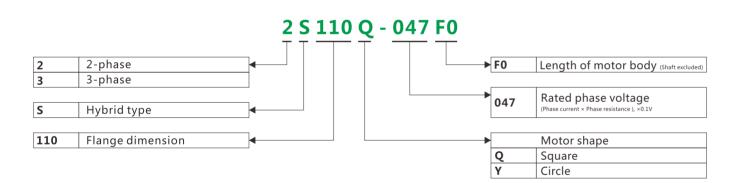

Phase No.	Flange	Model	Holding torque (N.m)	Phase current (A)	Phase resistance	Phase inductance (mH)	Inertia (Kg.cm²)	Lead No.	Shalf diameter (mm)	Shalf type	Length (mm)	Weight (Kg)	Step angle (°)
	86	2S86Q-051F6	12.8	6	0.85±10%	10±20%	4	4	15.875	Flat key	156	5.3	1.8
2		2S110Q-03999	11.7	5.5	0.7±10%	9.8±20%	5.5	4	19	Flat key	99	5	1.8
	110	2S110Q-047F0	21	6.5	0.72±10%	12.8±20%	10.9	4	19	Flat key	150	8.4	1.8
phase		2S110Q-054K1	30	8	0.67±10%	11±20%	16.2	4	19	Flat key	201	11.7	1.8
Ф	130	2S130Y-039M0	27	6	0.65±10%	13.8±20%	33.3	4	19	Flat key	165	13	1.8
	150	2S130Y-063R8	40	7	0.9±10%	9.5±20%	48.4	4	19	Flat key	230	19	1.8
ω	57	3S57Q-04056	0.9	5.6	0.7±10%	1.7±20%	0.3	4	6.35	Without key	56	0.72	1.2
	3/	3S57Q-04079	1.5	5.8	1.05±10%	2.4±20%	0.48	4	8	Without key	79	1	1.2
phase	85	3S85Q-04097	4	5.8	1.1±10%	4.6±20%	2.32	4	12	Crescent key	97	2.7	1.2
Ф	65	3S85Q-040F7	7.5	4	1.78±10%	17.1±20%	0.44	4	14	Flat key	157±1	5.3	1.2

Selection table of stepper driver & motor

Control mode			Pul: con	se trol			I/O control	Pulse control				Field bus control AA: CANopen LA: RS485	
Driver Motor	525/102	Stassan Stass	2005 2005	201860	<0.000 cm	30,000	CN8804	<1/14/2*	5H1160*	M11801	M23801	3422804	FM860
2S42Q-0240	√						√	√					√
2S42Q-0348	√						√	√					√
2S57Q-0541	√						√						√
2S57Q-0956		√	√	√			√						√
2S57Q-1376		√	√	√			√						√
2S57Q-2280			√	√	√		√						√
2S57Q-25B2			√	√	√		√						√
2S86Q-3465					√		√		√	√			√
2S86Q-4580					√		√		√	√			√
2S86Q-85B8					√		√		√	√			√
2S86Q-051F6					√		√		√	√			√
2S110Q-03999									√	√	√		
2S110Q-047F0									√	√	√		
2S110Q-054K1									√	√	√		
2S130Y-039M0											√		
2S130Y-063R8											√		
3S57Q-04056						√	√						√
3S57Q-04079						√	√						√
3S85Q-04097						√	√						√
3S85Q-040F7												√	

Note : √ indicates recommended motor model.


^{*} Except 2M412 & 2H1160, other driver models could driver the third-party motors.

Stepper Driver 2CM545



- Support parameter self-adaptive function, generate optimal parameters according to motor type, ensure motor run at optimal performance;
- · Phase memory function;
- · Automatic half-current function, selected by DIP switches;
- Test running function, selected by DIP switches;
- Over voltage protection, over current protection functions;
- Micro-step filter function can smooth input pulse to reduce transient motion of motor, make sure motor run more smoothly;
- Opto-isolation ERR signal output with max. current of 100mA;
- Opto-isolation 5-24V pulse input, responding frequency up 400KHz;
- 15 subdivision levels and 8 current levels are selectable by DIP switches;
- Pulse type is selectable by DIP switches: PUL+DIR&CW/CCW.

Mechanical Dimensions (Unit: mm)

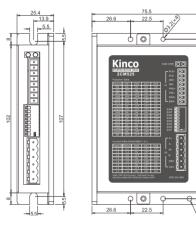

0 0	ď	7
0.8 0.6 0FF 0H 0 1.2 0.8 0N 0N 0 1.4 1.0 0FF 0FF 0 1.5 1.1 0N 0FF 0 2.3 1.4 0FF 0N 0		110
ρ 🔘	9 9	1

Function of DIP switches

Function	DIP setting	Description				
PLS+DIR	SW6,SW7=ON; Others=OFF	Set DIP switches according to functions required when				
CW/CCW	SW7,SW8=ON; Others=OFF	power off. Power on driver, RUN LED blinking in green, ERR LED is red. It means				
Micro-step smooth & dynamic filter disable	SW5,SW6=ON; Others=OFF	settings take effect. Then power off driver, reset				
Micro-step smooth filter enable	SW5,SW7=ON; Others=OFF	subdivision and current for normal use.				
Micro-step dynamic filter enable	SW5,SW8=ON; Others=OFF					
Test motor parameter upon power on disable	SW6,SW7,SW8=ON; Others=OFF					
Test motor parameter upon power on enable	SW5,SW6,SW7=ON; Others=OFF					
Test running	SW6,SW8=ON; Others=OFF	Motor running @80RPM				
Automatic half-current	SW5=ON	Set SW5=ON to enable automatic half-current. Phase current will reduce to half of the set value after motor stops for 1.5s				


Technical Specifications

85VDC 15VDC				
ole values				
in total. (Unit: A)				
els in total				
otor				
4VDC				
ent:100mA				
ates				
different status				
Over voltage, under voltage, over current, over heat				
of				
ses				
ops)				
ık)				
IP20				

	1		// · DIII	SE (DE) ()					4.)
Sub	division	setting	Current setting (Unit: A)						
SW1	SW2	SW3	SW4=ON	SW4=OFF	SW6	SW7	SW8	RMS	Peak
ON	ON	ON	200	1000	ON	ON	ON	1.8	2.5
OFF	ON	ON	400	2000	OFF	ON	ON	1.4	2
ON	OFF	ON	800	4000	ON	OFF	ON	1.1	1.6
OFF	OFF	ON	1600	5000	OFF	OFF	ON	1	1.4
ON	ON	OFF	3200	8000	ON	ON	OFF	0.8	1.2
OFF	ON	OFF	6400	10000	OFF	ON	OFF	0.6	0.8
ON	OFF	OFF	12800	20000	ON	OFF	OFF	0.4	0.6
OFF	OFF	OFF	25600	NA	OFF	OFF	OFF	0.2	0.3



Mechanical Dimensions (Unit:mm)

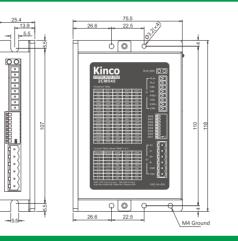

Function of DIP switches

Function	DIP setting	Description			
PLS+DIR	SW6,SW7=ON; Others=OFF	Set DIP switches according to functions required when			
CW/CCW	SW7,SW8=ON; Others=OFF	power off. Power on driver, RUN LED blinking in green, ERR LED is red. It means			
Micro-step smooth & dynamic filter disable	SW5,SW6=ON; Others=OFF	settings take effect. Then power off driver, reset			
Micro-step smooth filter enable	SW5,SW7=ON; Others=OFF	subdivision and current for normal use.			
Micro-step dynamic filter enable	SW5,SW8=ON; Others=OFF				
Test motor parameter upon power on disable	SW6,SW7,SW8=ON; Others=OFF				
Test motor parameter upon power on enable	SW5,SW6,SW7=ON; Others=OFF				
Test running	SW6,SW8=ON; Others=OFF	Motor running @80RPM			
Automatic half-current	SW5=ON	Set SW5=ON to enable automatic half-current. Phase current will reduce to half of the set value after motor stops for 1.5s			

• Support parameter self-adaptive function, generate optimal parameters according to motor type, ensure motor run at optimal performance;

- · Phase memory function;
- Automatic half-current function, selected by DIP switches;
- Test running function, selected by DIP switches;
- Over voltage protection, over current protection functions;
- Micro-step filter function can smooth input pulse to reduce transient motion of motor, make sure motor run more smoothly;
- Opto-isolation ERR signal output with max. current of 100mA;
- Opto-isolation 5-24V pulse input, responding frequency up 400KHz;
- 15 subdivision levels and 8 current levels are selectable by DIP switches;
- Pulse type is selectable by DIP switches: PUL+DIR&CW/CCW.

Technical Specifications

In	out voltage	24 ~ 50VDC			
O۱	vervoltage protection	85VDC			
Ur	ndervoltage protection	15VDC			
O۱	erheat protection	85°C(Temperature of thermistor)			
Ph	ase current(Peak)	1/1.5/2/2.5/3/3.5/4/4.5, 8 settable values			
		in total. (Unit: A)			
Su	bdivision	200~25600 Pulse/rev , 15 subdivision levels in total			
Ac	laptable motor	57 series 2-phase hybird stepper motor			
		PLS (CW) 、 DIR(CCW)、 FREE ,			
In	out signal	Input voltage: 5 ~ 24VDC,			
		Input current: 8mA@5VDC, 12mA@24VDC			
Control mode		Pulse control : PLS+DIR , CW/CCW			
Output signal		ERR, open collector output, maximum current:100mA			
Op	peration indicator	Combination of RUN and ERR LED indicates			
		different status			
Pro	otection circuit	Over voltage, under voltage, over current, over heat			
Сс	oling method	Nature air cooling			
ш	Operation environment	Avoid environment with great amount of			
l≅.		metallic powder, oil mist, or erosive gases			
onr	Operation humidity	<85%, RH(Non-condensing or water drops)			
Environment	Operation temperature	0°C ~ +40°C			
Storage temperature		-20°C ~ +70°C			
W	eight(Net)	0.25kg			
Di	mensions	118×75.5×25.4 mm (Toothless heat sink)			
Ing	gress protection	IP20			


Subo	division	setting	(Unit:PUL	Cu	rrent	setting	(Unit:	A)	
SW1	SW2	SW3	SW4=ON	SW4=OFF	SW6	SW7	SW8	RMS	Peak
ON	ON	ON	200	1000	ON	ON	ON	3.2	4.5
OFF	ON	ON	400	2000	OFF	ON	ON	2.8	4
ON	OFF	ON	800	4000	ON	OFF	ON	2.5	3.5
OFF	OFF	ON	1600	5000	OFF	OFF	ON	2.1	3
ON	ON	OFF	3200	8000	ON	ON	OFF	1.8	2.5
OFF	ON	OFF	6400	10000	OFF	ON	OFF	1.4	2
ON	OFF	OFF	12800	20000	ON	OFF	OFF	1.1	1.5
OFF	OFF	OFF	25600	NA	OFF	OFF	OFF	0.7	1

Stepper Driver 2CM860



- Support parameter self-adaptive function, generate optimal parameters according to motor type, ensure motor run at optimal performance;
- · Phase memory function;
- · Automatic half-current function, selected by DIP switches;
- Test running function, selected by DIP switches;
- Over voltage protection, over current protection functions;
- Micro-step filter function can smooth input pulse to reduce transient motion of motor, make sure motor run more smoothly;
- Opto-isolation ERR signal output with max. current of 100mA;
- Opto-isolation 5-24V pulse input, responding frequency up 400KHz;
- 15 subdivision levels and 8 current levels are selectable by DIP switches;
- Pulse type is selectable by DIP switches: PUL+DIR&CW/CCW.

Mechanical Dimensions (Unit : mm)

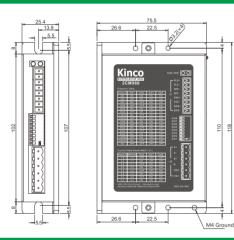

Function of DIP switches

Function	DIP setting	Description			
PLS+DIR	SW6,SW7=ON; Others=OFF	Set DIP switches according to functions required when			
cw/ccw	SW7,SW8=ON; Others=OFF	power off. Power on driver, RUN LED blinking in green, ERR LED is red. It means			
Micro-step smooth & dynamic filter disable	SW5,SW6=ON; Others=OFF	settings take effect. Then power off driver, reset subdivision and current for normal use.			
Micro-step smooth filter enable	SW5,SW7=ON; Others=OFF				
Micro-step dynamic filter enable	SW5,SW8=ON; Others=OFF				
Test motor parameter upon power on disable	SW6,SW7,SW8=ON; Others=OFF				
Test motor parameter upon power on enable	SW5,SW6,SW7=ON; Others=OFF				
Test running	SW6,SW8=ON; Others=OFF	Motor running @80RPM			
Automatic half-current	SW5=ON	Set SW5=ON to enable automatic half-current. Phase current will reduce to half of the set value after motor stops for 1.5s			


Technical Specifications

Input voltage		24 ~ 50VDC			
Overvoltage protection		85VDC			
Undervoltage protection		15VDC			
Ov	erheat protection	80°C(Temperature of thermistor)			
Ph	ase current(Peak)	1.8/2.4/3/3.6/4.2/4.8/5.4/6, 8 settable values			
		in total. (Unit: A)			
Su	bdivision	200~25600 Pulse/rev , 15 subdivision levels in total			
Ad	laptable motor	57 series 2-phase hybird stepper motor			
		PLS、DIR、FREE,			
Inp	out signal	Input voltage : 5 ~ 24VDC ,			
		Input current: 8mA@5VDC, 12mA@24VDC			
Со	ntrol mode	Pulse control : PLS+DIR , CW/CCW			
Οι	ıtput signal	ERR, open collector output, maximum current:100mA			
Op	peration indicator	Combination of RUN and ERR LED indicates			
		different status			
Pro	otection circuit	Over voltage, under voltage, over current, over hea			
Co	oling method	Nature air cooling			
ш	Operation environment	Avoid environment with great amount of			
]≤.		metallic powder, oil mist, or erosive gases			
Environment	Operation humidity	<85%, RH(Non-condensing or water drops)			
ner	Operation temperature	0°C ~ +40°C			
7	Storage temperature	-20°C ~ +70°C			
We	eight(Net)	0.25kg			
Dii	mensions	118×75.5×25.4 mm (Toothless heat sink)			
Ing	gress protection	IP20			

Subo	division	setting	(Unit:PUL	SE/REV)	Cu	rrent	setting	(Unit:	(A)
SW1	SW2	SW3	SW4=ON	SW4=OFF	SW6	SW7	SW8	RMS	Peak
ON	ON	ON	200	1000	ON	ON	ON	4.2	6
OFF	ON	ON	400	2000	OFF	ON	ON	3.8	5.4
ON	OFF	ON	800	4000	ON	OFF	ON	3.4	4.8
OFF	OFF	ON	1600	5000	OFF	OFF	ON	3	4.2
ON	ON	OFF	3200	8000	ON	ON	OFF	2.5	3.6
OFF	ON	OFF	6400	10000	OFF	ON	OFF	2.1	3
ON	OFF	OFF	12800	20000	ON	OFF	OFF	1.7	2.4
OFF	OFF	OFF	25600	NA	OFF	OFF	OFF	1.3	1.8



Mechanical Dimensions (Unit:mm)

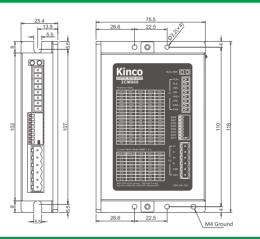

Function of DIP switches

Function	DIP setting	Description
PLS+DIR	SW6,SW7=ON; Others=OFF	Set DIP switches according to functions required when
CW/CCW	SW7,SW8=ON; Others=OFF	power off. Power on driver, RUN LED blinking in green, ERR LED is red. It means
Micro-step smooth & dynamic filter disable	SW5,SW6=ON; Others=OFF	settings take effect. Then power off driver, reset
Micro-step smooth filter enable	SW5,SW7=ON; Others=OFF	subdivision and current for normal use.
Micro-step dynamic filter enable	SW5,SW8=ON; Others=OFF	
Test motor parameter upon power on disable	SW6,SW7,SW8=ON; Others=OFF	
Test motor parameter upon power on enable	SW5,SW6,SW7=ON; Others=OFF	
Test running	SW6,SW8=ON; Others=OFF	Motor running @80RPM
Automatic half-current	SW5=ON	Set SW5=ON to enable automatic half-current. Phase current will reduce to half of the set value after motor stops for 1.5s

- Support parameter self-adaptive function, generate optimal parameters according to motor type, ensure motor run at optimal performance;
- · Phase memory function;
- Automatic half-current function, selected by DIP switches;
- Test running function, selected by DIP switches;
- Over voltage protection, over current protection functions;
- Micro-step filter function can smooth input pulse to reduce transient motion of motor, make sure motor run more smoothly;
- Opto-isolation ERR signal output with max. current of 100mA;
- Opto-isolation 5-24V pulse input, responding frequency up 400KHz;
- 15 subdivision levels and 8 current levels are selectable by DIP switches;
- Pulse type is selectable by DIP switches: PUL+DIR&CW/CCW.

Technical Specifications

_					
In	out voltage	24 ~ 70VDC			
O١	ervoltage protection	85VDC			
Ur	ndervoltage protection	15VDC			
O۱	erheat protection	80°C(Temperature of thermistor)			
Ph	ase current(Peak)	1.8/2.4/3/3.6/4.2/4.8/5.4/6, 8 settable values			
		in total. (Unit: A)			
Su	bdivision	200~25600 Pulse/rev , 15 subdivision levels in total			
Ac	laptable motor	57 series 2-phase hybird stepper motor			
		PLS、DIR、FREE,			
In	out signal	Input voltage : 5 ~ 24VDC ,			
		Input current: 8mA@5VDC, 12mA@24VDC			
Co	ntrol mode	Pulse control : PLS+DIR , CW/CCW			
Οι	ıtput signal	ERR, open collector output, maximum current:100mA			
Op	peration indicator	Combination of RUN and ERR LED indicates			
		different status			
Pro	otection circuit	Over voltage, under voltage, over current, over heat			
Co	ooling method	Nature air cooling			
ш	Operation environment	Avoid environment with great amount of			
nvi.		metallic powder, oil mist, or erosive gases			
luo.	Operation humidity	<85%, RH(Non-condensing or water drops)			
Environment	Operation temperature	0°C ~ +40°C			
7	Storage temperature	-20°C ~ +70°C			
W	eight(Net)	0.25kg			
Di	mensions	118×75.5×25.4 mm (Toothless heat sink)			
Ing	gress protection	IP20			

Subo	Subdivision setting (Unit:PULSE/REV)				Cu	rrent	setting	(Unit:	A)
SW1	SW2	SW3	SW4=ON	SW4=OFF	SW6	SW7	SW8	RMS	Peak
ON	ON	ON	200	1000	ON	ON	ON	4.2	6
OFF	ON	ON	400	2000	OFF	ON	ON	3.8	5.4
ON	OFF	ON	800	4000	ON	OFF	ON	3.4	4.8
OFF	OFF	ON	1600	5000	OFF	OFF	ON	3	4.2
ON	ON	OFF	3200	8000	ON	ON	OFF	2.5	3.6
OFF	ON	OFF	6400	10000	OFF	ON	OFF	2.1	3
ON	OFF	OFF	12800	20000	ON	OFF	OFF	1.7	2.4
OFF	OFF	OFF	25600	NA	OFF	OFF	OFF	1.3	1.8


Stepper Driver 3CM880




- Support parameter self-adaptive function, generate optimal parameters according to motor type, ensure motor run at optimal performance;
- · Phase memory function;
- Automatic half-current function, selected by DIP switches;
- Test running function, selected by DIP switches;
- Over voltage protection, over current protection functions;
- Micro-step filter function can smooth input pulse to reduce transient motion of motor, make sure motor run more smoothly;
- Opto-isolation ERR signal output with max. current of 100mA;
- Opto-isolation 5-24V pulse input, responding frequency up 400KHz;
- 15 subdivision levels and 8 current levels are selectable by DIP switches;
- Pulse type is selectable by DIP switches: PUL+DIR&CW/CCW.

24 70VDC

Mechanical Dimensions (Unit: mm)



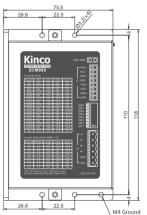

Function of DIP switches

Function	DIP setting	Description
PLS+DIR	SW6,SW7=ON; Others=OFF	Set DIP switches according to functions required when
CW/CCW	SW7,SW8=ON; Others=OFF	power off. Power on driver, RUN LED blinking in green, ERR LED is red. It means
Micro-step smooth & dynamic filter disable	SW5,SW6=ON; Others=OFF	settings take effect. Then power off driver, reset
Micro-step smooth filter enable	SW5,SW7=ON; Others=OFF	subdivision and current for normal use.
Micro-step dynamic filter enable	SW5,SW8=ON; Others=OFF	
Test motor parameter upon power on disable	SW6,SW7,SW8=ON; Others=OFF	
Test motor parameter upon power on enable	SW5,SW6,SW7=ON; Others=OFF	
Test running	SW6,SW8=ON; Others=OFF	Motor running @80RPM
Automatic half-current	SW5=ON	Set SW5=ON to enable automatic half-current. Phase current will reduce to half of the set value after motor stops for 1.5s

Technical Specifications


Input voltage


Input voltage		24 ~ 70VDC			
Overvoltage protection		85VDC			
Undervoltage protection		15VDC			
Ov	erheat protection	80°C(Temperature of thermistor)			
Ph	ase current(Peak)	2.4/3.2/4/4.8/5.6/6.4/7.2/8, 8 settable values			
		in total. (Unit: A)			
Su	bdivision	200~25600 Pulse/rev , 15 subdivision levels in total			
Ad	laptable motor	57/86 series 2-phase hybird stepper motor			
		PLS、DIR、FREE,			
Inp	out signal	Input voltage: 5 ~ 24VDC,			
		Input current: 8mA@5VDC, 12mA@24VDC			
Co	ntrol mode	Pulse control : PLS+DIR , CW/CCW			
Οι	ıtput signal	ERR, open collector output, maximum current:100mA			
Op	peration indicator	Combination of RUN and ERR LED indicates			
		different status			
Pro	otection circuit	Over voltage, under voltage, over current, over hea			
Со	oling method	Nature air cooling			
ш	Operation environment	Avoid environment with great amount of			
nvi.		metallic powder, oil mist, or erosive gases			
luo.	Operation humidity	<85%, RH(Non-condensing or water drops)			
Environment	Operation temperature	0°C ~ +40°C			
7	Storage temperature	-20°C ~ +70°C			
We	eight(Net)	0.253kg			
Dii	mensions	118×75.5×34 mm (Toothed heat sink)			
Ing	gress protection	IP20			

Subo	division	setting	(Unit:PUL	SE/REV)	Current setting (Unit: A)				A)
SW1	SW2	SW3	SW4=ON	SW4=OFF	SW6	SW7	SW8	RMS	Peak
ON	ON	ON	200	1000	ON	ON	ON	5.7	8
OFF	ON	ON	400	2000	OFF	ON	ON	5.1	7.2
ON	OFF	ON	800	4000	ON	OFF	ON	4.5	6.4
OFF	OFF	ON	1600	5000	OFF	OFF	ON	4	5.6
ON	ON	OFF	3200	8000	ON	ON	OFF	3.4	4.8
OFF	ON	OFF	6400	10000	OFF	ON	OFF	2.8	4
ON	OFF	OFF	12800	20000	ON	OFF	OFF	2.3	3.2
OFF	OFF	OFF	25600	NA	OFF	OFF	OFF	1.7	2.4



Mechanical Dimensions (Unit:mm)



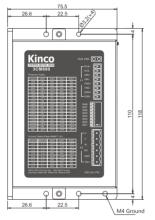

Function of DIP switches

Function	DIP setting	Description
PLS+DIR	SW6,SW7=ON; Others=OFF	Set DIP switches according to functions required when
CW/CCW	SW7,SW8=ON; Others=OFF	power off. Power on driver, RUN LED blinking in green, ERR LED is red. It means
Micro-step smooth & dynamic filter disable	SW5,SW6=ON; Others=OFF	settings take effect. Then power off driver, reset
Micro-step smooth filter enable	SW5,SW7=ON; Others=OFF	subdivision and current for normal use.
Micro-step dynamic filter enable	SW5,SW8=ON; Others=OFF	
Test motor parameter upon power on disable	SW6,SW7,SW8=ON; Others=OFF	
Test motor parameter upon power on enable	SW5,SW6,SW7=ON; Others=OFF	
Test running	SW6,SW8=ON; Others=OFF	Motor running @80RPM
Automatic half-current	SW5=ON	Set SW5=ON to enable automatic half-current. Phase current will reduce to half of the set value after motor stops for 1.5s

- Support parameter self-adaptive function, generate optimal parameters according to motor type, ensure motor run at optimal performance;
- · Phase memory function;
- Automatic half-current function, selected by DIP switches;
- Test running function, selected by DIP switches;
- Over voltage protection, over current protection functions;
- Micro-step filter function can smooth input pulse to reduce transient motion of motor, make sure motor run more smoothly;
- Opto-isolation ERR signal output with max. current of 100mA;
- Opto-isolation 5-24V pulse input, responding frequency up 400KHz;
- 15 subdivision levels and 8 current levels are selectable by DIP switches;
- Pulse type is selectable by DIP switches: PUL+DIR&CW/CCW.

Technical Specifications

Input voltage		24 ~ 70VDC		
O۱	vervoltage protection	85VDC		
Ur	ndervoltage protection	15VDC		
O۱	erheat protection	80°C(Temperature of thermistor)		
Ph	ase current(Peak)	2.4/3.2/4/4.8/5.6/6.4/7.2/8, 8 settable values		
		in total. (Unit: A)		
Su	bdivision	400~25600 Pulse/rev , 15 subdivision levels in total		
Ac	laptable motor	3-phase hybird stepper motor		
		PLS、DIR、FREE,		
In	out signal	Input voltage : 5 ~ 24VDC ,		
		Input current: 8mA@5VDC, 12mA@24VDC		
Co	ntrol mode	Pulse control: PLS+DIR, CW/CCW		
Οι	ıtput signal	ERR, open collector output, maximum current:100mA		
Op	peration indicator	Combination of RUN and ERR LED indicates		
		different status		
Pro	otection circuit	Over voltage, under voltage, over current, over heat		
Сс	oling method	Nature air cooling		
	Operation environment	Avoid environment with great amount of		
l≅.		metallic powder, oil mist, or erosive gases		
onr	Operation humidity	<85%, RH(Non-condensing or water drops)		
Operation humidity Operation temperature		0°C ~ +40°C		
7	Storage temperature	-20°C ~ +70°C		
W	eight(Net)	0.253kg		
Di	mensions	118×75.5×34 mm (Toothed heat sink)		
Ing	gress protection	IP20		
		· · · · · · · · · · · · · · · · · · ·		


Sub	Subdivision setting (Unit:PULSE/REV)					rrent	setting	(Unit:	A)
SW1	SW2	SW3	SW4=ON	SW4=OFF	SW6	SW7	SW8	RMS	Peak
ON	ON	ON	400	4000	ON	ON	ON	5.7	8
OFF	ON	ON	500	5000	OFF	ON	ON	5.1	7.2
ON	OFF	ON	600	6000	ON	OFF	ON	4.5	6.4
OFF	OFF	ON	800	10000	OFF	OFF	ON	4	5.6
ON	ON	OFF	1000	12800	ON	ON	OFF	3.4	4.8
OFF	ON	OFF	1200	20000	OFF	ON	OFF	2.8	4
ON	OFF	OFF	2000	25600	ON	OFF	OFF	2.3	3.2
OFF	OFF	OFF	3000	NA	OFF	OFF	OFF	1.7	2.4

Stepper Driver 2M412



- 6 opto-isolation digital signal input channels, 3 channels support voltage range 5-24VDC;
- 1 opto-isolation digital signal output channel, max current 100mA;
- Support CW/CCW, PLS+DIR, A+B phase signal;
- Multiple IO functions, supporting homing, multi-speed, multi-position
- Support motor parameter self-adaptive, self-defined shalf lock current, self-defined micro-step filter function;
- Powerful protection function: over voltage, under voltage, over heat, over current protection;
- Support RS232 communication, parameter settings via KincoStep software.

Mechanical Dimensions (Unit:mm)

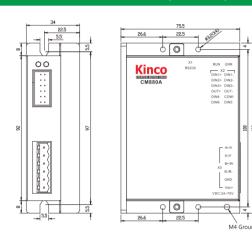

Technical Specifications

Input voltage	24~70VDC
Over voltage protection	85VDC
Under voltage protection	15VDC
Output current	0.15~8A (Peak)
Subdivision	Set by "KincoStep" software
Adaptable motor	2-phase & 3-phase hybird stepper motor
Control mode	I/O control ;
	Pulse control: PLS+DIR, CW/CCW, A+B phase
Cooling method	Nature air cooling
Operation environment	Avoid environment with great amount of
	metallic powder, oil mist, or erosive gases.
Environment humidity	<85%, RH (Non-condensing or water drops)
Environment temperature	0°C ~ +40°C
Storage temperature	-20°C ~ +70°C
Weight(Net)	0.29kg
Dimensions	108×75.5×34 mm (Toothed heat sink)
Ingress protection	IP20

Interface Introduction


		Interface	Function
X1	RS232		RS232 interface
	DIN1+	DIN1 positive input	
	DIN1-	DIN1 negative input	Input voltage: 5 ~ 24VDC
	DIN2+	DIN2 positive input	Input current: 8mA@5VDC, 12mA@24VDC
	DIN2-	DIN2 negative input	Valid input signal : >3VDC
	DIN3+	DIN3 positive input	Invalid input signal: <1VDC
X2	DIN3-	DIN3 negative input	
IO	DIN4	DIN4 input	Input voltage: 12~24VDC
interface	DIN5	DIN5 input	Input current : 4mA@12VDC , 8mA@24VDC
	DIN6	DIN6 input	Valid input signal : >8VDC
	COMI	COM of DIN4, DIN5, DIN6	Invalid input signal: <5VDC
	OUT+	OUT positive input	Max. output current: 100mA
	OUT-	OUT negative input	Max. voltage drop : 0.8VDC@100mA Max. withstand voltage : 30VDC

Note: (1) DIN1&DIN2 adopt high-speed opto-coupler, max. input frequency is 400KHz, min. pulse width is 1us.

- (2) DIN3~6 adopt low-speed opto-coupler, max. input frequency is 10KHz.
- (3) OUT adopts low-speed opto-coupler, max. output frequency is 1KHz



Mechanical Dimensions (Unit: mm)

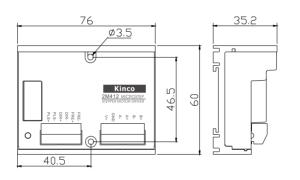

Function of DIP switches



is used to set the working mode and parameters of the driver. Please carefully read the reference before use. Do remember to cut off the power before changing the settings of the DIP switch.



		ON	OFF	Remarks
	DIP1~DIP4	Subdivision setting	Subdivision setting	
	DIP5	Half current of static current	Full current of static current	
ı	DIP6~DIP8	Output current setting	Output current setting	

The su	ubdivision setting	DIP1 is ON	DIP1 is OFF	
DIP2	DIP3	DIP4	subdivision	subdivision
ON	ON	ON	N/A*	2
OFF	ON	ON	4	4
ON	OFF	ON	8	5
OFF	OFF	ON	16	10
ON	ON	OFF	32	25
OFF	ON	OFF	64	50
ON	OFF	OFF	128	100
OFF	OFF	OFF	256	200

^{*} N/A indicates invalid. The DIP switch is forbidden setting as N/A.

- The maximum supply voltage can reach 40V;
- The bipolar constant current drive mode is taken, with a maximum drive current up to 1.2A per phase, which can drive any 42 series two-phase bipolar hybrid stepper motors with a current less than 1.2A;
- The drive output phase current of a motor can be regulated through the DIP switch, to match motors of different specifications;
- A DIP switch is used to set the automatic half current function of motors in statically locked status, which can greatly reduce heat dissipation of the motors;
- A dedicated control chip is used, with a maximum of 256/200 subdivisions. The subdivision function can be set by the DIP switch, to ensure the best operation
- Supporting offline function so that the output current of a motor can be cut off if
- Optical coupling devices are used for the isolation of the input circuit of the control signals to reduce interference of external noises.

Technical Specifications

Supply voltage	12 ~ 40V DC
Output phase current	0.2 ~ 1.2A
Control signal input current	6 ~ 16mA
Cooling method	Natural air cooling
Operating environment	Avoid the environment with a great amount of metallic powder, oil mist, or erosive gases
Operating temperature	-10°C ~ +45°C
Operating humidity	<85% (non-condensing or water drops)
Weight	0.13Kg

Current setting



There is a red 8-bit function setting switch at the top of the driver, which is used to set the

working mode and parameters of the driver.
Please carefully read the reference before use. Do remember to cut off the power before changing the settings of the DIP switch.

Front view of the DIP switches:



The output phase current setting table						
DIP6	DIP7	DIP8	Output Current			
OFF	OFF	OFF	0.20A			
OFF	OFF	ON	0.35A			
OFF	ON	OFF	0.50A			
OFF	ON	ON	0.65A			
ON	OFF	OFF	0.80A			
ON	OFF	ON	0.90A			
ON	ON	OFF	1.00A			
ON	ON	ON	1.20A			

Precaution!



It supports control signal voltage of 5VDC. When the voltage of control signal is 24VDC, then users should add a 2kohm resistor in the connection.


Stepper Driver 2M2280N




- High performance, multiple functions, simple operation, cost-effective;
- Automatic parameter adjustable regulation, ensures motor run at optimal
- · Supporting driver test running function;
- Supporting phase memory function, driver will record phase position of motor during motor stop to ensure motor not shake when re-power;
- With step smooth filter, can smooth input pulse and reduce the transient motion of motor, make sure motor run more smoothly;
- Supporting automatic half current function of motors in statically locked status, which can greatly reduce heat dissipation of the motors;
- Automatic internal high-subdivision conversion technology ensures motor run at optimal subdivision state;
- Opto-isolation ERR signal output with max. current of 10mA;
- Opto-isolation signal input, with pulse response frequency up to 400KHz.

77 122V/AC (FOLL=)

Mechanical Dimensions (Unit: mm)

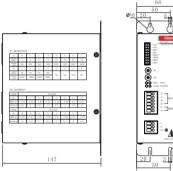



Operation Table

Mode	S1	S2	Method
Auto Run	E	0~F	Set S1=E, S2=0~F when driver is powered off, then power on the driver, the motor will run at 60RPM automatically.
PLS+DIR	0~B	0~7	Set S1=0~B, S2=0~7 when driver is powered off, then power on the driver, the motor will run in PLS+DIR mode.
CW/CCW	0~B	8~F	Set S1=0~B, S2=8~F when driver is powered off, then power on the driver, the motor will run in CW/CCW mode.
Half current	F	С	Set S1 and S2 as the "MODE settings (as the left table)" when driver is
Full current	F	D	powered off. Then power on the driver, the 4 LEDs will run as: RUN LED blinks,
Step smooth filter enable	F	F	POWER LED is green, ERR LED is red, CHOP LED is off. It means the mode setting is succeed, then restart the
Step smooth filter disable	F	Е	driver, the driver will work in setting mode.

Technical Specifications

Input voltage

//~123VAC, (50Hz)		
187VDC		
85VDC		
4.5 / 5 / 5.5 / 6 / 6.5 / 7 / 7.5 / 8, 8 settable values		
in total. (Unit: A)		
2/ 4/ 5/ 8/ 10/ 16/ 20/ 32/ 50/ 64/ 100/ 128,		
total 12 subdivisions.		
57/86/110 series 2-phase bipolar hybrid stepper motors		
PLS(CW), DIR(CCW), A/B, FREE; Current range: 6~16mA		
Pulse control : PLS+DIR, CW/CCW, A+B		
ERR, open collector output, maximum current:10mA		
The driver will reduce phase current of the		
motor by a half in 1.5 seconds		
Overvoltage, undervoltage, short circuit and		
over heat protection.		
Absorb regenerated energy of motor by		
connecting to power resistor. Custom function.		
Fan cooling		
Avoid the environment with great amount of metallic		
powder, oil mist, or erosive gases.		
<85%, RH (non-condensing or water drops)		
0°C ~ +40°C		
-20°C ~ +70°C		
1.5Kg		
201 x 147 x 66 mm		
IP20		

Please confirm with factory for custom of driver with dynamic braking circuit.
--


S1 , Micro-step : switch for subdivision and test running function								
S1	0	1	2	3	4	5	6	7
Microstep	2	4	5	8	10	16	20	32
Pulse/rev	400	800	1000	1600	2000	3200	4000	6400
S1	8	9	Α	В	С	D	E	F
Microstep	50	64	100	128			TECT	
Pulse/rev	10000	12800	20000	25600	NA	NA	TEST	NA

S2 , Current : switch for current and PLS/DIR, CW/CCW setting								
Mode	PLS+D	IR						
S2	0	1	2	3	4	5	6	7
Rms(A)	3.18	3.54	3.89	4.24	4.60	4.95	5.30	5.65
Peak(A)	4.5	5	5.5	6	6.5	7	7.5	8
Mode	CW/CCW							
S2	8	9	Α	В	С	D	E	F
Rms(A)	5.65	5.30	4.95	4.60	4.24	3.89	3.54	3.18
Peak(A)	8	7.5	7	6.5	6	5.5	5	4.5

 $^{^{\}star}$ DIP switch is forbidden to set as N/A, or the driver will be alarm automatically.



Mechanical Dimensions (Unit: mm)

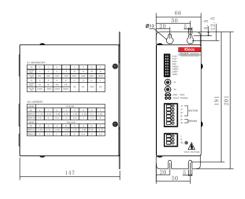

Operation Table

Mode S1 S2 Method

	Wioue	31	32	Wictiou
	Auto Run	E	0~F	Set S1=E, S2=0~F when driver is powered off, then power on the driver, the motor will run at 60RPM automatically.
	PLS+DIR	0~B	0~7	Set S1=0~B, S2=0~7 when driver is powered off, then power on the driver, the motor will run in PLS+DIR mode.
	CW/CCW	0~B	8~F	Set S1=0~B, S2=8~F when driver is powered off, then power on the driver, the motor will run in CW/CCW mode.
	Half current	F	С	Set S1 and S2 as the "MODE settings (as the left table)" when driver is
	Full current	F	D	powered off. Then power on the driver, the 4 LEDs will run as: RUN LED blinks,
	Step smooth filter enable	F	F	POWER LED is green, ERR LED is red, CHOP LED is off. It means the mode setting is succeed, then restart the
	Step smooth filter disable	F	Е	driver, the driver will work in setting mode.

- High performance, multiple functions, simple operation, cost-effective;
- Automatic parameter adjustable regulation, ensures motor run at optimal
- · Supporting driver test running function;
- Supporting phase memory function, driver will record phase position of motor during motor stop to ensure motor not shake when re-power;
- With step smooth filter, can smooth input pulse and reduce the transient motion of motor, make sure motor run more smoothly;
- Supporting automatic half current function of motors in statically locked status, which can greatly reduce heat dissipation of the motors;
- Automatic internal high-subdivision conversion technology ensures motor run at optimal subdivision state;
- Opto-isolation ERR signal output with max. current of 10mA;
- Opto-isolation signal input, with pulse response frequency up to 400KHz.

Technical Specifications

In	out voltage	220VAC ±15%(50Hz) (187~253VAC)	
O۱	er-voltage protection	395VDC	
Ur	nder-voltage protection	200VDC	
Οι	ıtput current	4.5 / 5 / 5.5 / 6A / 6.5 / 7 / 7.5 / 8, 8 settable values	
		in total. (Unit: A)	
M	cro step	2/ 4/ 5/ 8/ 10/ 16/ 20/ 32/ 50/ 64/ 100/ 128,	
		total 12 subdivisions.	
Ac	laptable motor	110/130 series 2-phase bipolar hybrid stepper motors	
In	out signal	PLS(CW), DIR(CCW), A/B, FREE; Current range: 6~16mA	
Co	ontrol mode	Pulse control : PLS+DIR, CW/CCW, A+B	
Οι	ıtput signal	ERR, open collector output, maximum current:10mA	
Αι	tomatic half current	The driver will reduce phase current of the	
		motor by a half in 1.5 seconds	
Pr	otection	Overvoltage, undervoltage, short circuit and	
		over heat protection.	
Dy	namic braking circuit *	Absorb regenerated energy of motor by	
		connecting to power resistor. Custom function.	
Co	oling way	Fan cooling	
ш	Operation Environment	Avoid the environment with great amount of metallic	
₹.		powder, oil mist, or erosive gases.	
9	Operation humidity	<85%, RH (non-condensing or water drops)	
Environment	Operation temperature	0°C ~ +40°C	
	Storage temperature	-20°C ~ +70°C	
W	eight	1.5Kg	
Di	mensions	201 x 147 x 66 mm	
In	gress protection	IP20	
* DI	assa confirm with factory for cu	tom of driver with dynamic braking circuit	

 $^{^{\}star}$ Please confirm with factory for custom of driver with dynamic braking circuit.

S1, Micro-step: switch for subdivision and test running function								
S1	0	1	2	3	4	5	6	7
Microstep	2	4	5	8	10	16	20	32
Pulse/rev	400	800	1000	1600	2000	3200	4000	6400
S1	8	9	Α	В	С	D	E	F
Microstep	50	64	100	128			TECT	
Pulse/rev	10000	12800	20000	25600	NA	NA	TEST	NA

S2 , Current : switch for current and PLS/DIR, CW/CCW setting								
Mode	PLS+D	IR						
S2	0	1	2	3	4	5	6	7
Rms(A)	3.18	3.54	3.89	4.24	4.60	4.95	5.30	5.65
Peak(A)	4.5	5	5.5	6	6.5	7	7.5	8
Mode	CW/C0	CW/CCW						
S2	8	9	Α	В	С	D	E	F
Rms(A)	5.65	5.30	4.95	4.60	4.24	3.89	3.54	3.18
Peak(A)	8	7.5	7	6.5	6	5.5	5	4.5


^{*} DIP switch is forbidden to set as N/A, or the driver will be alarm automatically.

Stepper Driver 3M2280N



- Power supply: 60VAC~123VAC;
- Bipolar constant current drive mode is adopted, with phase current up to 6.5A. 86 &110 series bipolar hybird stepper motors are adaptable;
- Dedicated control chip is adopted, full-step or half-step mode are selectable by DIP switches, suitable for application requiring high speed and high torque;
- Output phase current is selectable by DIP switches to match motors of different specifications;
- Automatic half-current is settable by DIP switches when motor is standstill locked, which could greatly reduce of motors;
- · Support offline function to cut of current output if necessary;
- Opto couplers are used for the control signal circuit to reduce external interference.

Mechanical Dimensions (Unit: mm)

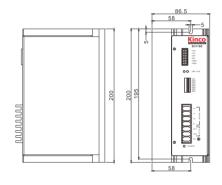

Technical Specifications

Power supply	Single phase 60VAC ~ 123VAC(50Hz)
Ouput phase current	2.5 ~ 6.5A
Input current of control signal	6 ~ 16mA
Cooling method	Nature air cooling
Operation environment	Avoid environment with great amount of
	metallic powder, oil mist, or erosive gases
Environment humidity	<85%, RH(Non-condensing or water drops)
Environment temperature	-10°C ~ +45°C
Weight(Net)	1.77kg

Function of DIP switches

Front view of the DIP switches:



No.	ON	OFF	Remarks
DIP1~DIP5	Set current	Set current	
DIP6	Half-current valid	Half-current invalid	
DIP7	Half-step 400 steps/ round	Full-step 200 steps/ round	


Precaution!



Control signal range is $5\!\sim\!24\text{VDC}.$ No need to add 2Kohm resistor when control signal is 24VDC.

Current setting


Front view of the DIP switches:



Settings of output phase current							
DIP1	DIP2	DIP3	DIP4	DIP5	Peak value of output current		
ON	ON	ON	ON	ON	2.5A		
OFF	ON	ON	ON	ON	3.0A		
ON	OFF	ON	ON	ON	3.5A		
OFF	OFF	ON	ON	ON	4.0A		
ON	OFF	OFF	ON	ON	4.5A		
OFF	OFF	OFF	ON	ON	5.0A		
OFF	OFF	OFF	OFF	ON	6.0A		
OFF	OFF	OFF	OFF	OFF	6.5A		



Mechanical Dimensions (Unit:mm)

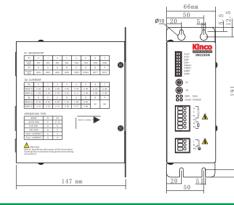

Operation Table

Mode	S1	S2	Method
Auto Run	F	0~D	Set the s1&s2 as S1=F,S2=0~D when driver is power off, then power on the driver, the motor will run automatically.
PLS+DIR	Е	Е	
CW/CCW	E	F	Set S1 and S2 as the
HALF CURRENT	E	С	"MODE settings (as the left table)" when driver is power off, then power on the driver, the 4 standards LED will run as: , this means the mode setting is
FULL CURRENT	E	D	success, then reboot the driver, the driver will work in setting mode.
Step smooth filter enable	F	F	Enable smoothing acceleration/ deceleration function.
Step smooth filter disable	F	E	Enable immediately response mode.

• High performance, diverse functions, simple operation, cost-effective;

- Automatic parameter adjustable regulation;
- Driver test running function;
- · Phase memory function;
- PLS+DIR and CW/CCW control signal available;
- · Opto-isolation ERR signal output;
- The driver will reduce the phase current of the motor by a half in 1.5 seconds;
- Opto-isolation signal input, with pulse response frequency up to 400 KHz;
- 14 micro-step value, the maximum micro-step value is 20000 pulse/rev.The maximum output phase current is 8A(Peak);
- With the protection function of over-voltage, under-voltage, over-current, overheat and phase dislocation;
- With step smooth filter, can smooth the input pulse, reduce the transient motion of motor, make the motor runs more smoothly.

Technical Specifications

Inp	out voltage	220V AC±15% (50Hz)		
Ov	er-voltage protection	395VDC		
Un	der-voltage protection	200VDC		
Ov	erheat protection	80°C(Temperature of thermistor)		
Ph	ase current	2.8/3.2/3.6/4.0/4.4/4.8/5.2/5.6/6.0/6.4/6.8/		
		7.2/7.6/8.0, 14 settable values in total. (Unit: A)		
Mi	cro step	400~30000 pulse/rev, total 14 subdivisions		
Ad	aptable motor	110 / 130 series 3-phase hybird stepper motor		
Inp	out signal	PLS(CW) / DIR(CCW) / FREE; current range: 6 ~16mA		
Co	ntrol signal mode	PLS+DIR; CW/CCW, A+B		
Ou	tput signal	ERR, open collector output, max current: 10mA		
Au	tomatic half-current	The driver will reduce the phase current of		
		the motor by a half in 1.5 seconds		
Pro	otection	Over-voltage, under-voltage, short circuit,		
		and over heat protection		
Dy	namic braking circuit*	Absorb regenerated energy of motor by connecting		
		to power resistor. Custom function		
Со	oling method	Forced air cooling		
ш	Operation	Avoid the environment with great amount of metallic		
l√.	environment	powder, oil mist, or erosive gases		
onr	Operation humidity	<85%, RH (non-condensing or water drops)		
environment Operation humidity Operation temperature		0°C ~ +40°C		
7	Storage temperature	-20°C ~ +70°C		
We	eight (net)	1.5Kg		
nid	nensions	201 x 147 x 66 mm		
Ing	ress protection	IP20		

S1 , Micro-step : switch for subdivision and test running function								
S1	0	1	2	3	4	5	6	7
Pulse/rev	400	500	600	800	1000	1200	1500	2000
S1	8	9	Α	В	С	D	E	F
Pulse/rev	3000	4000	5000	6000	10000	20000	SET1	SET2

S2 , Current : switch for current and PLS/DIR, CW/CCW setting								
S2	0	1	2	3	4	5	6	7
Peak(A)	2.80	3.20	3.60	4.00	4.40	4.80	5.20	5.60
Rms(A)	1.98	2.26	2.55	2.83	3.11	3.39	3.68	3.96
S2	8	9	Α	В	С	D	E	F
Peak(A)	6.00	6.40	6.80	7.20	7.60	8.00	M1	M2
Rms(A)	4.24	4.53	4.81	5.09	5.37	5.66	IVII	IVIZ


Power supply module PFC100-65

 ϵ



- 6 opto-isolation digital input channels, 3 channels support voltage range
 5 24 VDC:
- 3 opto-isolation digital signal output channels, max current 100mA;
- 1 analog signal input channel(±10V) speed control;
- Support PLS+DIR, CW/CCW and A+B signal;
- Opto-isolation CAN or RS485 interfaces;
- Support CANopen and Modbus protocol;
- Multiple I/O functions, support homing, multi-speed;
- Support automatic parameter adjustable regulation, self-defined shalf-loack, step smooth filter;
- Over-voltage, under-voltage, overheat and over-current protection;
- Support RS232 communication, parameter settings by KincoStep software;
- · CE and RoHS.

Mechanical Dimensions (Unit:mm)

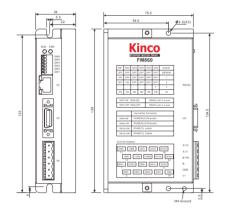

Introduction of Interface

Technical Specifications


Model	FM860-AA-000 (Supports CANopen)
	FM860-LA-000 (Support RS485 Modbus)
Input voltage	24 ~ 70VDC
Over-voltage protection	85V
Under-voltage protection	15V
Phase current (Peak)	0.15 ~ 8A
Subdivision	Set by "KincoStep" software
Adaptable motor	42/57/86 series 2-phase or 57/85 series
	3-phase hybrid stepper motor
Control mode	CANopen or Modbus control; I/O control; Analog input
	Pulse control : PLS+DIR, CW/CCW, A+B
Cooling method	Natural air cooling
Operation environment	Avoid the environment with a great amount of
	metallic powder, oil mist, or erosive gases.
Operation humidity	<85%, RH(non-condensing or water drops)
Operation temperature	0°C ~ +40°C
Storage temperature	-20°C~ +70°C
Weight	0.36Kg
Dimensions	134.5x 75.5 x 34mm
Ingress protection	IP20

Note: The communication able is suggested to purchased with the first order. Model: Console configuration cable (conversion cable RS232-to-RJ45)

Interface	Symbol		Function				
	SW7~SW8	Switches for setting 2-wire or 4-wire RS485	Switches for communication interface setting				
X1	SW9~SW10	Switches for terminal resistor setting	1				
(Field Bus)	X1A(IN)X1B(OUT)	CAN bus or RS485 interface				
ID DIP	SW1~SW6		ID rotary switch				
X2	RS232		RS232 interface				
	DIN1+	DIN1 positive					
	DIN1-	DIN1 negative	High speed digital signal	Input voltage: 3.3~24VDC			
	DIN2+	DIN2 positive	input interface:	Valid input signal: >2.5VDC and >4mA			
	DIN2-	DIN2 negative		Invalid input signal: <1.5VDC			
	DIN3+	DIN3 positive		Maximum input frequency of optocoupler: 1MHz			
	DIN3-	DIN3 negative]				
	DIN4	DIN4 input	Low speed digital signal	Scope of input voltage: 12~24VDC			
	DIN5	DIN5 input	input interface:	Valid input signal: >8VDC and >3mA			
	DIN6	DIN6 input]	Invalid input signal: <5VDC			
X3	COMI	Common port of DIN4, DIN5, DIN6]	Max. input frequency of optocoupler: 10kHz			
(IO)	AIN1+	AIN1 differential signal positive	The analog signal	The input impedance: 180K			
	AIN1-	AIN1 differential signal negative	input interface:	Max. input frequency: 4kHz			
	GND	Common port of AIN1 and logic power supply		Max. withstand voltage: 24VDC			
	5VDC	5VDC Logic power output	The maximum output current: 200mA				
	24VDC	24VDC Logic power input	Auxiliary logic power supply when external power supply does not work				
	OUT1	OUT1 output					
-	OUT2	OUT2 output	Max. output current: 100mA				
	СОМО	Common port of OUT1 and OUT2	Max. withstand voltage: 24VDC				
	OUT3+	OUT3 positive	Max. output frequency of o	ptocoupler: 1kHz			
	OUT3-	OUT3 negative					




Mechanical Dimensions (Unit: mm)

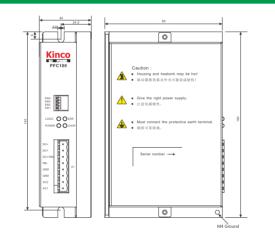

Typical Wiring Diagram

PFC100-65 power supply module



Built-in boost circuit ensures output 65V even when external voltage is too low;

- Built-in absorption circuit could discharge reverse electromotive force of motor:
- Over heat alarm function: when the internal temperature reach to 86°C, it will trigger over heat alarm. The boost and absorption function will be closed.
- Over voltage protection: once output voltage exceeds 68V, the boost function will be closed.

Technical Specifications

Model name	PFC100-65
Matched transformer	T400-40 (Input 220VAC 50Hz, Output 40V, 10A)
Rated voltage	40VAC
PFC action voltage	35VAC
Rated output voltage	DC 65V ± 10%
Rated output power	300W
η (Vin=40Vac)	90%
Power factor	0.99
Over voltage protection	DC 68V
Internal over heat protection	>85°C (Temperature of thermistor)
Absorption voltage	75V , 81V , 84V ±3V
Allowable absorption time	Absorption time: 150ms; Duty:6%
Cooling method	Natural air cooling
Operation environment	Avoid the environment with a great amount of
	metallic powder, oil mist, or erosive gases.
Environment temperature	0°C ~ +40°C
Environment humidity	<85%, RH(non-condensing or water drops)
Storage temperature	-20°C~ +70°C
Weight (Net)	0.603Kg

 $oldsymbol{17}$

Power supply module P110-65




- Output voltage displayed by LEDs;
- Built-in absorption circuit, requiring external absorption resistor;
- Built-in rectifier filter circuit.

Mechanical Dimensions (Unit: mm)



Model name	PRC100
Matched transformer	T1300-46(Input220VAC 50Hz, Output46V 28.5A)
Input voltage range	13~46VAC 50Hz
Input AC current	24A
Output DC voltage	18~65V DC
Max. output current	13A
Braking action voltage	77V
Braking close voltage	70V
Cooling method	Natural air cooling
Operation environment	Avoid the environment with a great amount of
	metallic powder, oil mist, or erosive gases.
Environment temperature	0°C ~ +40°C
Environment humidity	<85%, RH(non-condensing or water drops)
Storage temperature	-20℃~ +70℃
Weight(Net)	1.046Kg

Typical Wiring Diagram




Technical Specifications

PRC100
T1300-46(Input220VAC 50Hz, Output46V 28.5A)
13~46VAC 50Hz
24A
18~65V DC
13A
77V
70V
Natural air cooling
Avoid the environment with a great amount of
metallic powder, oil mist, or erosive gases.
0°C ~ +40°C
<85%, RH(non-condensing or water drops)
-20°C~ +70°C
1.046Kg

• Absorb reverse electromotive force of motor;

- Output will be cut off once output voltage exceeds 90V(Fuse burn-out);
- Operation temperature:0~45°C;
- Operation humidity:20~90%RH(Non-condensing);
- Strong and beautiful metal shell is with good protective effect and easy for installation.


Mechanical Dimensions (Unit:mm)

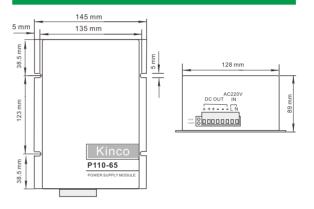

Technical Specifications

P110-65
AC220V/50Hz
DC65V
200W(Continuous) , Transient 310W

Typical Wiring Diagram

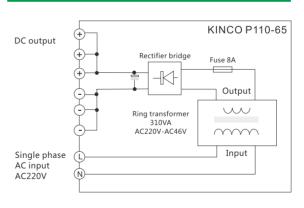

Description:

- 1. Greed indicator indicates power supply works normally. The power supply maybe faulty if the greed indicator is off;
- 2. The red indicator blinks or is normal on indicates the absorption circuit is absorbing regenerated energy. The red indicator is off during power supply normal work.

Precaution!



- 1. If the red indicator is normal on after power on, please cut off immediately and check the power supply;
- $2. \, The \, absorption \, circuit \, can \, not \, work \, for \, long \, time \, continuously, \, only \, for \,$ absorbing vibration of the power supply and reverse electromotive force of
- 3. If the green indicator do not turn on, please check the internal fuse firstly; If the fuse is intact, please return the power supply to factory.

Two-phase stepper motor/42 series

Two-phase stepper motor/57 series




Dimensions (Unit: mm)

Model	L	L1
2S42Q-0348	48	24±0.5
2S42Q-0240	40	16±0.5


Specification


Technical Spe	cifications	2S42Q-0348	2S42Q-0240	
Step angle		1.8°	1.8°	
Phase	Series	0.7	- 0.4	
current (A)	Parallel	1.4	- 0.4	
Holding torq	ue (Nm)	0.34	0.22	
Damping tor	que (Nm)	0.026	0.022	
Winding resis	stance (Ω)	4.6±10%	12.5±10%	
Winding indu	ıctance (mH)	4.0±20%	21±20%	
Motor inertia	Motor inertia (kg.cm²) 0.068		0.054	
Motor length	L (mm)	48	40	
Shaft diamete	er (mm)	5	5	
Number of lead wires 8		8	4	
Insulation cla	SS	В		
Withstand vo	ltage level	500VAC for 1minute		
Max. axial loa	ad (N)	10N		
Max. radial lo	ad (N)	28N (20mm from the flange)		
Operating ter	mperature	-20℃ ~ +50℃		
Surface temp	erature rise	Max.80°C (Both phases connected with rated current)		
Insulation im	pedance	Minimum 100MΩ, 500V DC		
Weight (kg)		0.36	0.28	

Motor cable















Torque-frequency curve

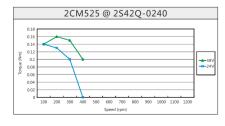

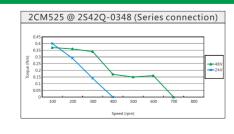

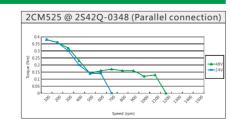

Dimensions (Unit:mm)

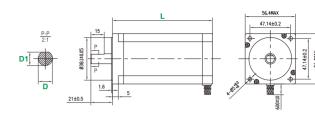

Model	L	D	D1
2S57Q-25B2	112	Ø8.0	7.5±0.1
2S57Q-2280	80	Ø8.0	7.5±0.1
2S57Q-1376	76	Ø6.35	5.8±0.1
2S57Q-0956	56	Ø6.35	5.8±0.1
2S57Q-0541	41	Ø6.35	5.8±0.1


Specification

 ϵ

Technical Spe	ecifications	2S57Q-25B2	2S57Q-2280	2S57Q-1376	2S57Q-0956	2S57Q-0541
Step angle		1.8°	1.8°	1.8°	1.8°	1.8°
Phase	Series	2.9	2.8	1.96	1.96	0.70
current (A)	Parallel	6	5.6	3.92	3.92	1.50
Holding torq	ue (Nm)	2.5	2.2	1.3	0.9	0.5
Damping tor	que (Nm)	0.12	0.07	0.068	0.04	0.022
Winding resi	stance (Ω)	1±10%	0.8±10%	1±10%	0.8±10%	3.6±10%
Winding indu	uctance (mH)	1.8±20%	1.8±20%	2.1±20%	1.2±20%	4.1±20%
Motor inertia	a (kg.cm²)	0.8	0.53	0.48	0.3	0.135
Motor length	n L (mm)	112	80	76	56	41
Shaft diamet	er (mm)	8	8	6.35	6.35	6.35
Number of le	ead wires	8				•
Insulation cla	iss	В				
Withstand vo	oltage level	500VAC for 1minute				
Max. axial loa	ad (N)	15N				
Max. radial lo	oad (N)	75N (20mm from the flange)				
Operating te	mperature	-20°C ~ +50°C				
Surface temp	perature rise	Max.80°C (Both phases connected with rated current)				
Insulation im	pedance	Minimum 100MΩ, 500V DC				
Weight (kg)		1.7	1.1	1	0.7	0.45

Motor cable







Note: AWG 22# UL1007 , Length: 600.

Two-phase stepper motor/86 series


Torque-frequency curve

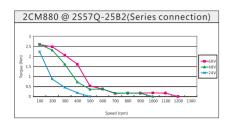





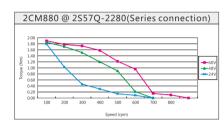





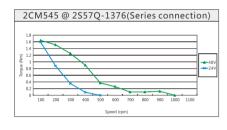


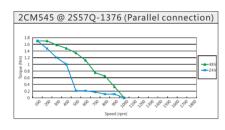

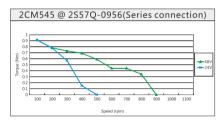


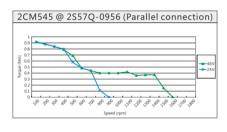

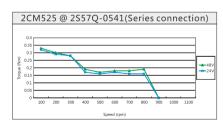

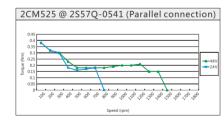

CE

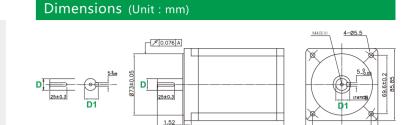


Model	L	D	D1
2S86Q-051F6	156	Ø15.875	17.875 +0.2
2S86Q-85B8	118	Ø13	15 +0.2
2S86Q-4580	80	Ø13	15 +0.2
2S86Q-3465	65	Ø13	15 +0.2


Specification


Technical Specifications	2S86Q-051F6	2S86Q-85B8	2S86Q-4580	2S86Q-3465		
Step angle	1.8°	1.8°	1.8°	1.8°		
Phase current (A)	6.0	6.0	6.0	6.0		
Holding torque (Nm)	12.8	8.5	4.5	3.4		
Damping torque (Nm)	0.36	0.24	0.12	0.08		
Winding resistance (Ω)	0.85±10%	0.6±10%	0.38±10%	0.3±10%		
Winding inductance (mH)	10±20%	6±20%	3.5±20%	1.7±20%		
Motor inertia (kg.cm²)	4	3.4	1.4	1		
Motor length L (mm)	156	118	80	65		
Shaft diameter (mm)	15.875	13	13	13		
Number of lead wires	4	4				
Insulation class	В					
Withstand voltage level	1200VAC 1S 5mA	1200VAC 1S 5mA				
Max. axial load (N)	60					
Max. radial load (N)	220					
Operating temperature	-20℃ ~ +50℃					
Surface temperature rise	Max.80°C (Both phases connected with rated current)					
Insulation impedance	Minimum 100MΩ, 500V DC					
Weight (kg)	5.3 3.7 2.3 1.7					
Startup freq. with no load(Hz)*	5.8K	10K	9.1K	10K		


Note: The startup freq. is tested under condition of 2000 steps/round, only for reference.




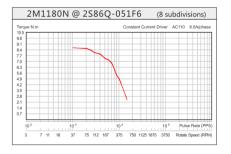



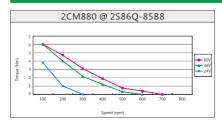

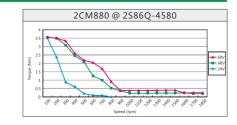

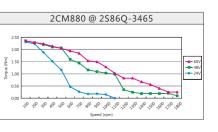


Two-phase stepper motor/110 series

Two-phase stepper motor/110 series



Dimensions (Unit: mm)

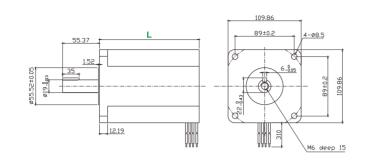


Specification

Technical Specifications	2S110Q-054K1	2S110Q-047F0	2S110Q-03999		
Step angle	1.8°	1.8°	1.8°		
Phase current (A)	8.0	6.5	5.5		
Holding torque (Nm)	30	21	11.7		
Damping torque (Nm)	0.75	0.59	0.3		
Winding resistance (Ω)	0.67±10%	0.72±10%	0.7±10%		
Winding inductance (mH)	11±20%	12.8±20%	9.8±20%		
Motor inertia (kg.cm²)	16.2	10.9	5.5		
Motor length L (mm)	201	150	99		
Shaft diameter (mm)	19	19	19		
Number of lead wires	4				
Insulation class	В				
Withstand voltage level	1200VAC 1S 5mA				
Max. axial load (N)	60	60			
Max. radial load (N)	220	220			
Operating temperature	-20°C ~ +50°C				
Surface temperature rise	Max.80°C (Both phases connected with rated current)				
Insulation impedance	Minimum 100MΩ, 500V DC				
Weight (kg)	11.7 8.4 5.0				
Startup freq. with no load(Hz)*	4.8K 4.5K 5.2K				


Note: The startup freq. is tested under condition of 2000 steps/round, only for reference.

Motor cable




Torque-frequency curve



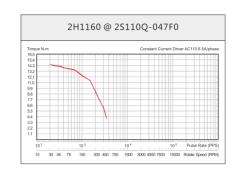





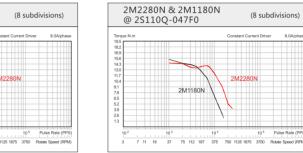




Two-phase stepper motor/130 series

Three-phase stepper motor/57 series



Dimensions (Unit: mm)

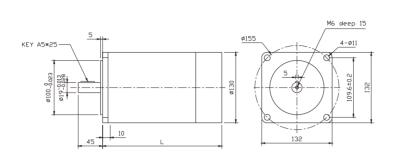

Specification

Technical Specifications	2S130Y-063R8	2S130Y-039M0	
Step angle	1.8°	1.8°	
Phase current (A)	7.0	6.0	
Holding torque (Nm)	40.0	27.0	
Damping torque (Nm)	1.2	0.8	
Winding resistance (Ω)	0.9±10%	0.65±10%	
Winding inductance (mH)	9.5±20%	13.8±20%	
Motor inertia (kg.cm²)	48.4	33.3	
Motor length L (mm)	230	165	
Shaft diameter (mm)	19	19	
Number of lead wires	4		
Insulation class	В		
Withstand voltage level	1800VAC 1S 5mA		
Max. axial load (N)	60		
Max. radial load (N)	220		
Operating temperature	-20℃~+50℃		
Surface temperature rise	Max.80°C (Both phases connected with rated current)		
Insulation impedance	Minimum 100MΩ, 500V DC		
Weight (kg)	19.0	13.0	
Startup freq. with no load(Hz)*	4.1K	4.9K	

Note: The startup freq. is tested under condition of 2000 steps/round, only for reference.


Motor cable

Pinput of motor connector




Torque-frequency curve



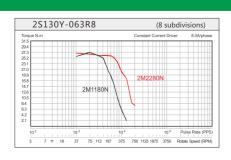

C €

Dimensions (Unit:mm)

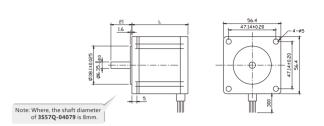


Specification

Technical Specifications	3S57Q-04079	3S57Q-04056	
Step angle	1.2°	1.2°	
Phase current (A)	5.8	5.6	
Holding torque (Nm)	1.5	0.9	
Damping torque (Nm)	0.07	0.04	
Winding resistance (Ω)	1.05±10%	0.7±10%	
Winding inductance (mH)	2.4±20%	1.7±20%	
Motor inertia (kg.cm²)	0.48	0.3	
Motor length L (mm)	79	56	
Shaft diameter (mm)	8	6.35	
Number of lead wires	6		
Insulation class	В		
Withstand voltage level	600VAC 1S 5mA		
Max. axial load (N)	15		
Max. radial load (N)	75		
Operating temperature	-20°C ~ +50°C		
Surface temperature rise	Max.80°C (Working with rated phase current)		
Insulation impedance	Minimum 100MΩ, 500V DC		
Weight (kg)	1	0.72	
Startup freq. with no load(Hz)*	2.1K	2.4K	

Note: The startup freq. is tested under condition of 2000 steps/round, only for reference.


Motor cable


Three-phase 6-wire motor



Note: AWG 18 # UL1332 , Length: 400.

Torque-frequency curve

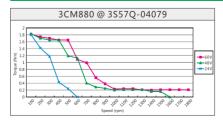


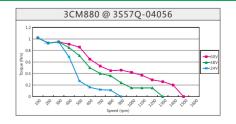

2/

Guide to Model Selection of Stepper Motors



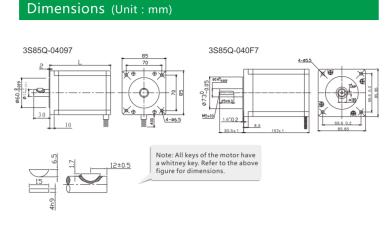



Specification

Technical Specifications	3S85Q-04097	3S85Q-040F7	
Step angle	1.2°	1.2°	
Phase current (A)	5.8	4	
Holding torque (Nm)	4.0	7.5	
Damping torque (Nm)	0.12	0.36	
Winding resistance (Ω)	1.1±10%	1.78±10%	
Winding inductance (mH)	4.6±20%	17.1±20%	
Motor inertia (kg.cm²)	2.32	0.44	
Motor length L (mm)	97	157±1	
Shaft diameter (mm)	12	14	
Number of lead wires	6	3	
Insulation class	В	В	
Withstand voltage level	600VAC 1S 5mA	1800VAC 1S 5mA	
Max. axial load (N)	60	60	
Max. radial load (N)	220	220	
Operating temperature	-20°C ~ +50°C	-30°C ~ +30°C	
Surface temperature rise	Max.80°C (Working with rated phase current)		
Insulation impedance	Minimum 100MΩ, 500V DC		
Weight (kg)	2.7	5.3	
Startup freq. with no load(Hz)*	1.4K	2.0K	


Note: The startup freq. is tested under condition of 2000 steps/round, only for reference.

Motor cable





Torque-frequency curve

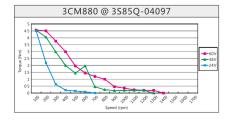





Motion Mode		Rotational Motion	Linear Motion		
		Rotational Motion	Horizontal axial direction	Vertical axial direction	
Mechanical structure		1/R Stepper Motor	LEAD:P _B	Stepper Motor M _c COUNTER WEIGHT 1/R LEAD:P _B M VI	
		$\begin{array}{ll} N\iota: JDrive\ speed\ (r/min) & M: JQuality\ of\ linear\ motion\ part\ (kg) \\ V\iota: JLoad\ speed\ (m/min) & M_c: JWeight\ quality\ (kg) \\ T\iota: JLoad\ torque\ (N/m) & 1/R: JGear\ reduction\ ratio \\ \mu: JFriction\ coefficient & \eta: JFriction\ coefficient \\ P_{\scriptscriptstyle B}: JScrew\ lead\ (m) & \end{array}$			
Speed curve		Vt Speed (m/min)	t_1 t_2 t_1	Time(s)	
Single travel	l(m)	$\iota = \frac{V\iota}{60} \; (\; t_0 - t_1)$			
Drive speed(rpm)		Nι	$N\iota = \frac{V\iota}{P_B}$	$N\iota = \frac{V\iota}{P_B}$	
Rotational speed of motor(rpm)		$N_{\scriptscriptstyle M}$ = $N\iota \cdot R$			
Load torque(N·m)		$T_L = \frac{TL}{R \cdot \eta}$	$T_{L} = \frac{\mu \cdot g \cdot M \cdot P_{B}}{2\pi \cdot R \cdot \eta}$	$T_{L} = \frac{g \cdot (M - M_{c}) \cdot P_{B}}{2\pi \cdot R \cdot \eta}$	
Load Inertia		$J_{L} = J_{L1} + J_{L2} + J_{L3}$			
(kg.m²)	Linear motion		$J_{L1} = M \cdot \left(\frac{P_B}{2\pi R}\right)^2$	$J_{L1} = (M + M_c) \cdot \left(\frac{P_B}{2\pi R}\right)^2$	
		· Solid Cylinder : $J_k = \frac{\pi}{32} \rho \cdot L \cdot D^4$	L(m)	density: iron $\rho = 7.9 \times 10^3 \left(kg / m^3 \right)$	
		D(m) Aluminum: $\rho = 2.7 \times 10^3 \ (kg/m)$			
	Rotational motion	· Hollow Cylinder : $J_{\kappa} = \frac{\pi}{32} \rho \cdot L \cdot ($	(D ₀ ⁴ -D ₁ ⁴)	Brass: $\rho = 8.5 \times 10^3 \ \left(kg \ / \ m^3 \right)$	
		Nylon: $\rho = 1.1 \times 10^3 \ \left(kg/m^3\right)$ Inertia loaded to motor shaft			
		Gear input : $J_{L2} = J_K$ Gear output : $J_{L3} = \frac{J_K}{R^2}$			
Start torque(N·m) $T_s = \frac{2\pi \cdot N_M (J_M + J_L)}{60 \times t_1}$		$T_s = \frac{2\pi \cdot N_M (J_M + J_L)}{60 \times t_1} \qquad J_M \text{ indicate}$	ndicates the inertia of the motor rotator (Unit: kg·m²)		
Necessary torque(N·m)		$T_M = (T_L + T_S) \times S$ S indicates the safety coefficient, normally 2~3			

Installation Instructions for Stepper Motors

Model Selection Procedure

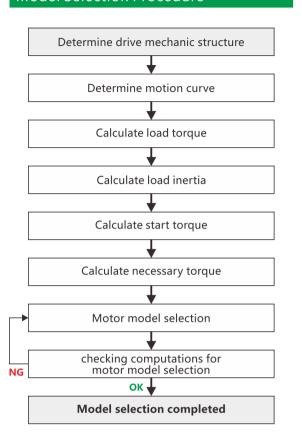


Example for Model Selection



V_l=1.5m/min Speed: Quality of slide part: M = 50 kgScrew length: $L_B=1.4m$ Screw diameter : $D_B = 0.012 m$ Screw lead: $P_B = 0.004 m$ Coupler quality: Mc=0.2kgQuter diameter of coupler : $D_c = 0.04 m$ Friction coefficient: $\mu = 0.3$ Movement distance: ι=0.0275m Motion time: $t_0 = 1.2s$ Mechanical efficiency: $\eta = 0.9$

(1) Speed curve



Acceleration time : $t_1 = t_0 - \frac{\iota}{V\iota} = 1.2 - \frac{0.0275}{1.5 \div 60} = 0.1(s)$

(2) Rotation speed of motor

$$N_M = \frac{V\iota}{P_B} = \frac{1.5}{0.004} = 375(rpm)$$

(3) Load torque

$$T_{L} = \frac{\mu \cdot g \cdot M \cdot P_{_{B}}}{2\pi \cdot R \cdot \eta} = \frac{0.3 \times 9.8 \times 50 \times 0.004}{2\pi \times 0.9} = 0.104 (N \cdot m)$$

(4) Load inertia

Linear motion :
$$JL_{M} = M \left(\frac{P_{B}}{2\pi}\right)^{2} = 50 \times \left(\frac{0.004}{2\pi}\right)^{2} = 0.2 \times 10^{-4} (kg \cdot m^{2})$$

Ball screw:
$$J_{B} = \frac{\pi}{32} \rho \cdot L_{B} \cdot D_{B}^{4} = \frac{\pi}{32} \times 7.87 \times 10^{3} \times 1.4 \times (0.012)^{4} = 0.224 \times 10^{-4} (kg \cdot m^{2})$$

Coupler:
$$J_c = \frac{1}{8} M_c \cdot D_c^2 = \frac{1}{8} \times 0.2 \times (0.04)^2 = 0.4 \times 10^{-4} (\text{kg} \cdot \text{m}^2)$$

Load inertia: $J_L = J_{LM} + J_B + J_C = 0.824 \times 10^{-4} (kg \cdot m^2)$

(5) Motor torque

Start torque

$$T_s = \frac{2\pi N_M (J_M + J_L)}{60t} = \frac{2\pi \times 375 \times (J_M + 0.824 \times 10^{-4})}{60 \times 0.1} = 0.032 + 392.5 J_M \text{ (N·m)}$$

Necessary torque : $T_M = (T_L + T_S) \times S = (T_L + T_S)) \times 2 = 0.272 + 0.08 \times 10^4 J_M (N \cdot m)$


S indicates the safety coefficient, normally 2. J_M indicates the inertia of the motor rotator(Unit:kg·m²)

(6) Motor selection

Based on the above calculation, preliminarily this motor model is selected, i.e., 2S56Q-02741.

Rotator inertia : $J_M = 0.135 \times 10^{-4} \text{ kg} \cdot \text{m}^2$ $T_M = 0.272 + 0.08 \times 10^4 \times 0.135 \times 10^{-4} = 0.283 (\text{N} \cdot \text{m})$

2S56Q-02741

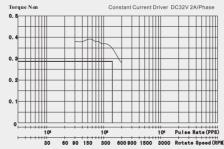


Refer to the torque-frequency curve of 2S56Q-02741. The output torque of the motor meets the requirements, so this motor is selected.

Installation Direction

There is no limitation for the installation direction of motors, but normally motors are horizontallyinstalled.

They also support vertical downward or upward installation.

Regardless of the installation direction of motors, please do not apply excessive vertical or horizontalload the shaft of a motor.



Installation

Please install the motor closely on a metallic surface with perfect heat conductivity.

Recommended Motor Installation Position

Motors shall be installed in positions meeting the following conditions:

- 1. Indoor;
- 2. The temperature inside the control cabinet shall range from -10°C~+50°C (non-freezing);
- 3. The humidity inside the control cabinet shall be less than 85% (non-condensing);
- 4. Free from erosive gases or dust;
- 5. Free from water or oil (if available, please install a sheath);
- 6. Perfect ventilation and heat dissipation.

Stepper motor Coupler Ball screw

Note:


Do not disassemble the motor;

Do not apply any impact to the motor shaft;


Do not install the motor in a place where it might bear long-term vibration, so as to avoid any possible damage to the motor shaft.


Aligned Connection of Load

When a load is connected to the motor shaft, make sure that the load shaft aligns with the motor shaft. It is recommended that an anti-backlash flexible coupler or other appropriate devices are used to meet this requirement. Mechanical processing is forbidden for the motor shaft. Please contact your supplier if it is really necessary.

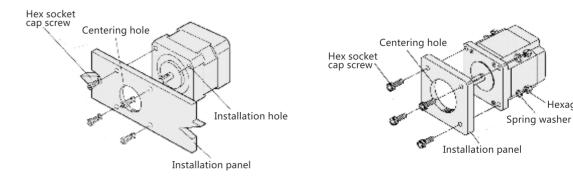



1. General Connection Mode of Control Signal

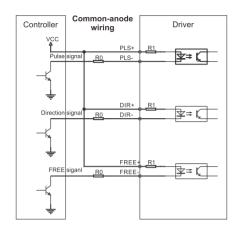

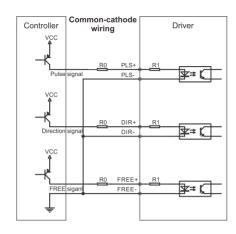

2. Twisted-pair Connection Mode of Control Signal

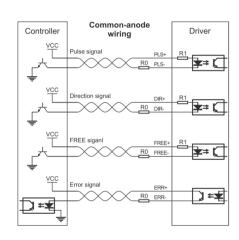


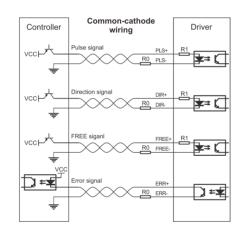

Note: 1. For 2CM525、2CM545、2CM560、2CM860、2CM880、3CM880、CM880A、2H1160、FM860, there is no need to connect 2K ohm resistor in the wiring, R0=0;

2. For 2M412、2M1180N、2M2280N、3M2280N, 2K ohm resistor is required to be connected serially, R0=2K ohm.

3. Signal control sequence

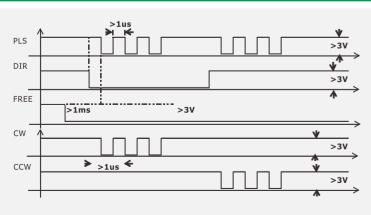



Providing Chinese Automation Solutions to Global Customers

